ACURA

INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
ACURA MUSIC LINK (FOR I-POD®)	**2006 TL**	**BII 31184-31893**
		Issue Date **FEB 2006**

PARTS LIST

Attachment Kit (sold separately) P/N 08A28-1H1-800

4 Cushion tapes



Holder cushion

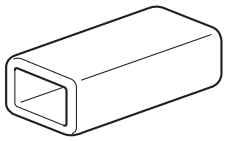

Grommet

8 Wire ties

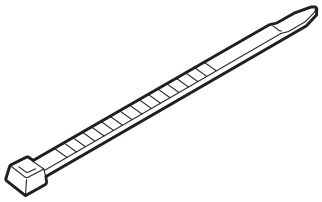

2 Long wire ties

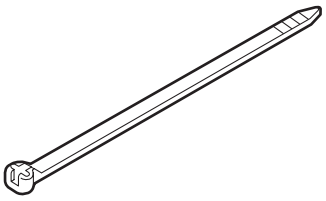

Music Link Adapter Kit (sold separately) P/N 08A28-1H2-100

Music Link adapter unit

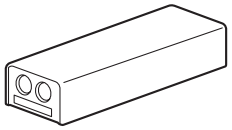

Bus cable

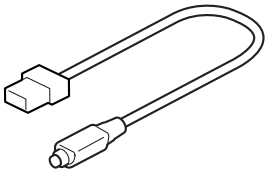

Music Link harness

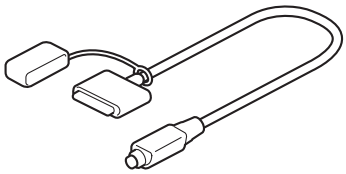

CD-ROM

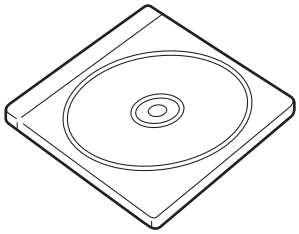

Quick reference guide

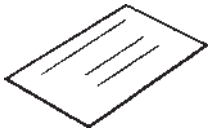

Bus Cable 2 Port (sold separately) P/N 08A31-0F1-000

Bus cable 2 port

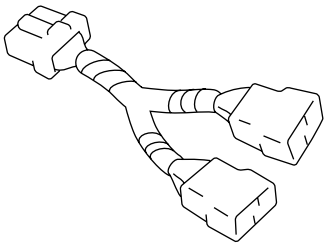

© 2006 American Honda Motor Co., Inc. - All Rights Reserved.

TOOLS AND SUPPLIES REQUIRED

#2 Phillips screwdriver
Flat-tip screwdriver
Diagonal cutters
Scissors
Ratchet
10 mm Socket
10 mm Combination wrench
Drill motor
Drill bit (3 mm)
Hole saw (20 mm)
Hook tool
Felt-tip pen
Pushpin
Eye protection
Isopropyl alcohol
Electrical tape

Illustration of the Music Link System Installed on the Vehicle

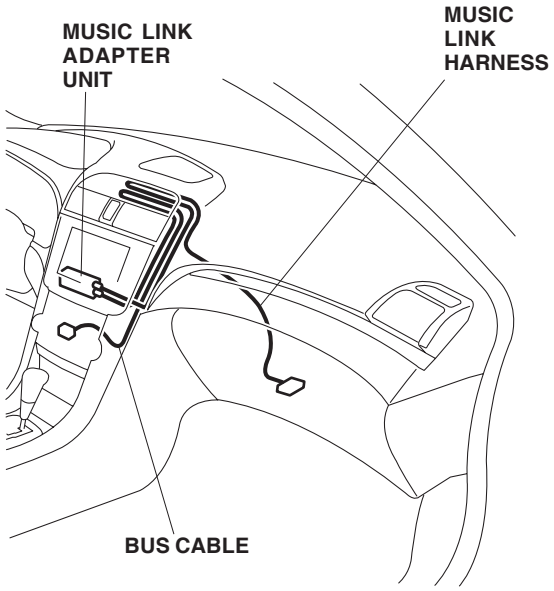

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.
3. Remove the passenger's dashboard under cover (three retaining clips and three pins).

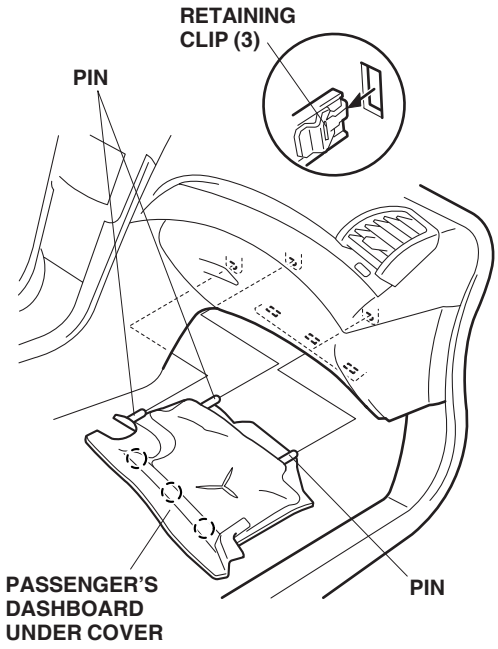

4. Remove the glove box.
   - Open the glove box. Remove the two stoppers, and release the one hook.
   - Remove the two nuts, and gently pull out the glove box to release the ten retaining clips. Unplug the two vehicle connectors, and remove the glove box.

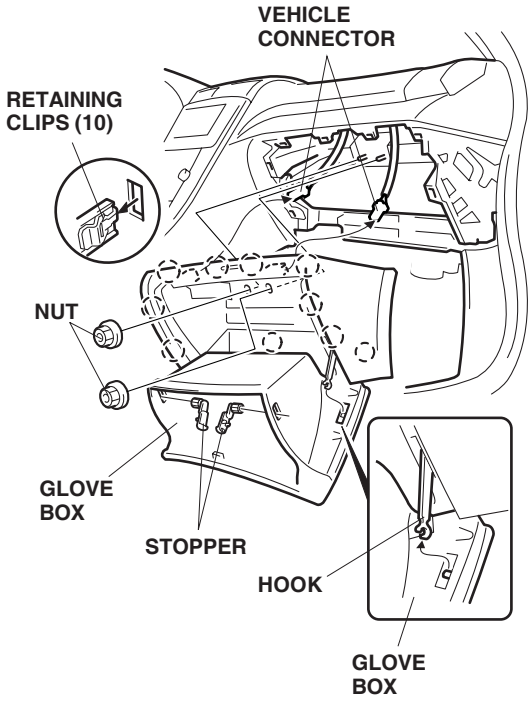

BII 31184-31893 (0602)
© 2006 American Honda Motor Co., Inc. - All Rights Reserved.

5. Gently pull up the right center console upper trim to release the nine retaining clips and three tabs. Remove the right center console upper trim.

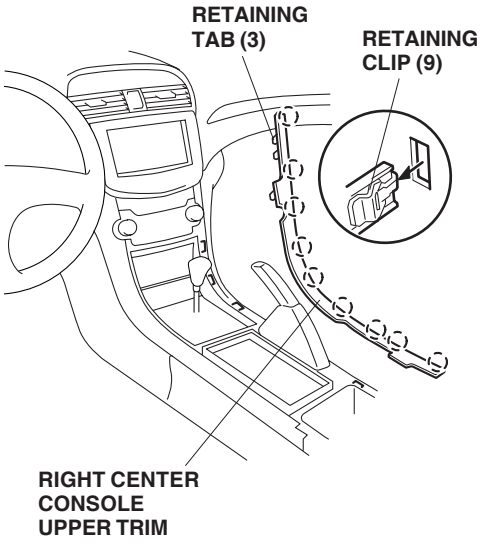

6. Using this same procedure, remove the left center console upper trim.

7. Open the console box, and remove the console mat. Remove the two screws and the two self-tapping screws from the center console.

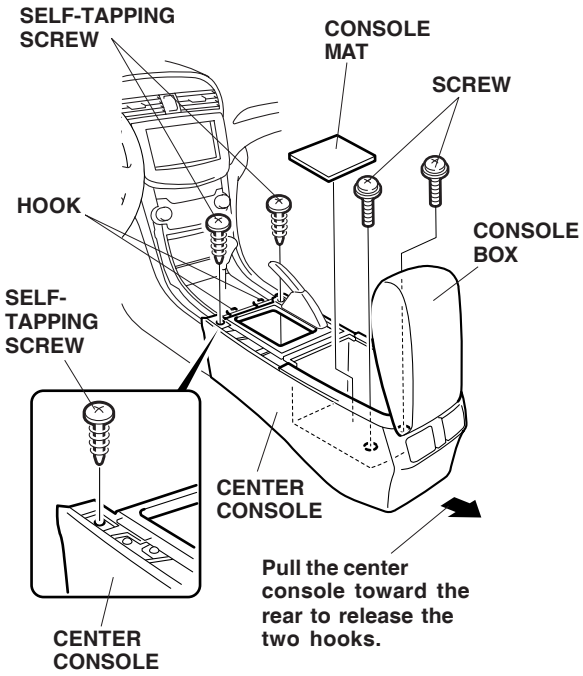

8. Pull the center console toward the rear to release the two hooks.

9. Lift the center console. Remove the vehicle clip, unplug the vehicle connectors from the center console, and remove the center console.

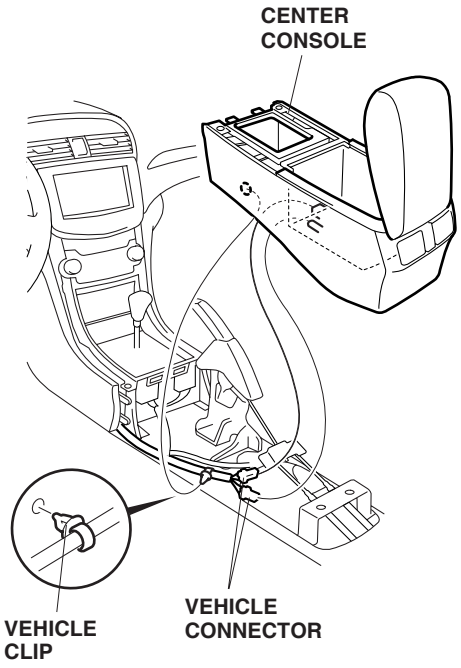

10. Remove the trim ring:

    A/T Model: Gently pry up on the trim ring to release the four hooks.

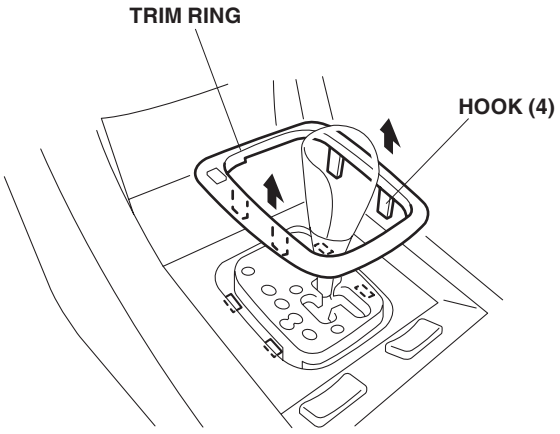

© 2006 American Honda Motor Co., Inc. - All Rights Reserved.

M/T Model: Gently pry up on the trim ring to release the six hooks.

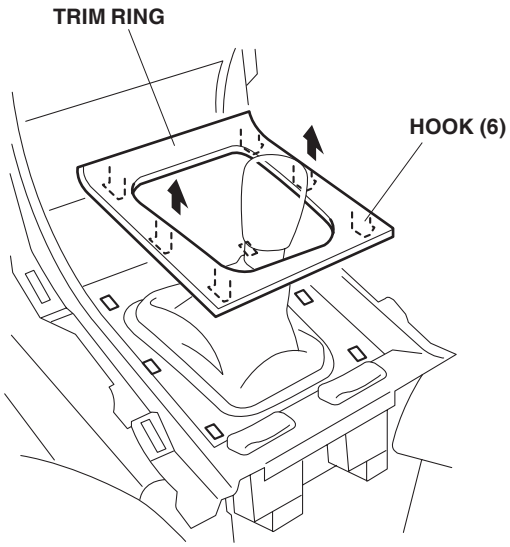

11. Remove the two self-tapping screws and the two screws from the passenger's seat side center console cover.

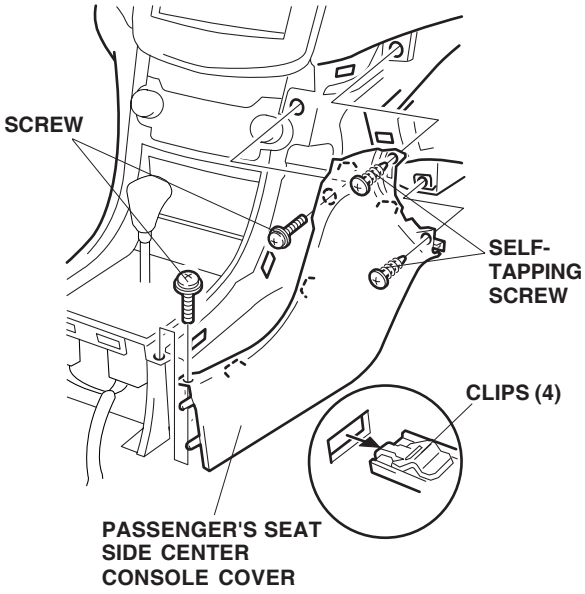

12. Pull the passenger's seat side center console cover out toward you to release the four clips, then remove the passenger's seat side center console cover.

13. Using the same procedure, remove the driver's seat side center console cover.

14. Pull the center console panel to release the pin, and unplug the vehicle connectors, then remove the center console panel. For M/T models, remove the shift knob before removing the center console panel.

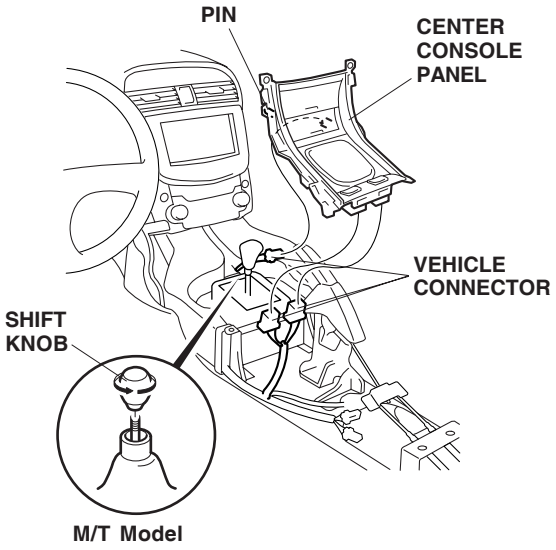

BII 31184-31893 (0602)
© 2006 American Honda Motor Co., Inc. - All Rights Reserved.

15. Using a hook tool, reach inside the vent and locate the small opening on each side. Gently pull the upper panel out to release the seven clips and four retaining tabs.

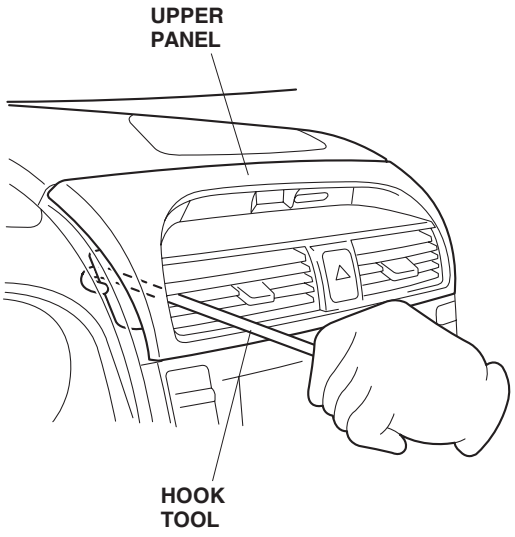

16. Unplug the vehicle connector, and remove the upper panel.

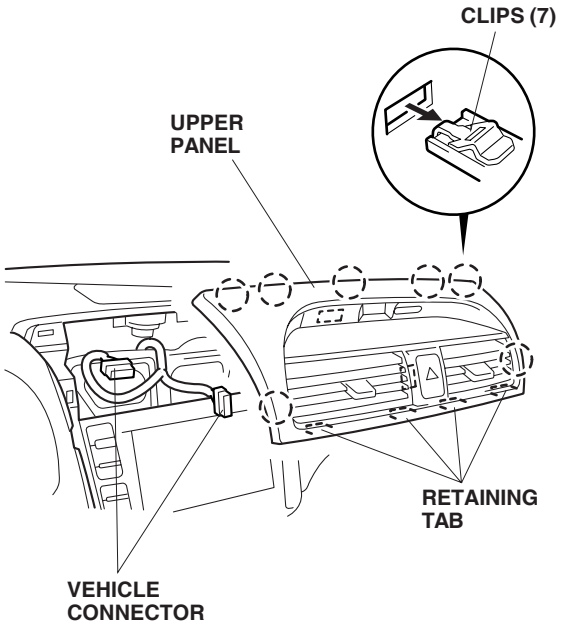

17. Remove the four bolts from the center panel.

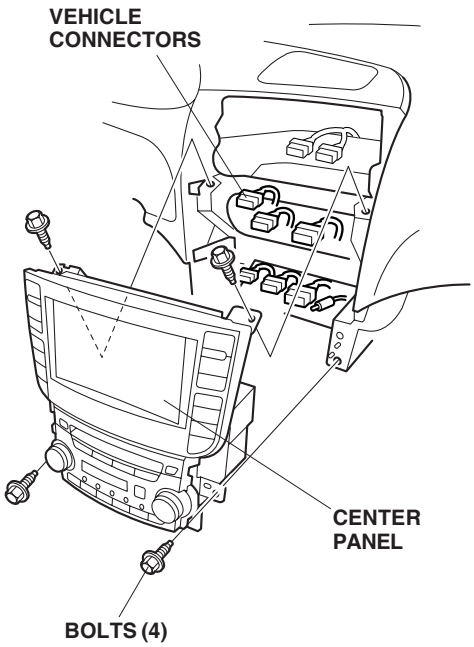

18. Pull the center panel out toward you, unplug the vehicle connectors, and remove the center panel.

19. At the center panel opening, route the bus cable as shown.

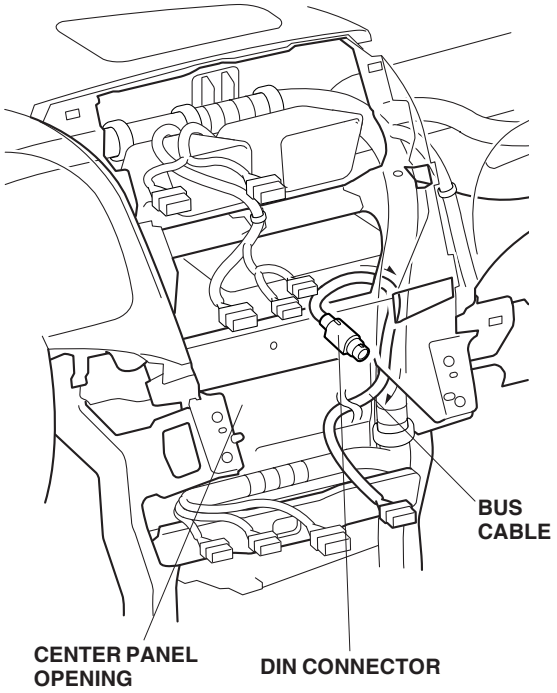

© 2006 American Honda Motor Co., Inc. - All Rights Reserved.

20. Connect the bus cable 14-pin connector and vehicle 14-pin connector to the bus cable 2 port 14-pin connectors.

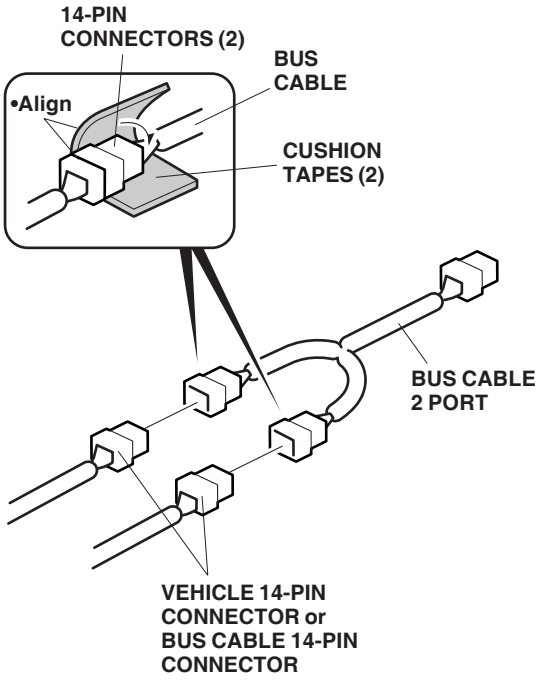

21. Attach the two cushon tapes to the bus cable 2 port 14-pin connectors connected in step 22 as illustrated.

22. Align the bus cable 2 port 14-pin connector with vehicle 20-pin connector and secure the bus cable 2 port to the vehicle harness with two wire ties as shown.

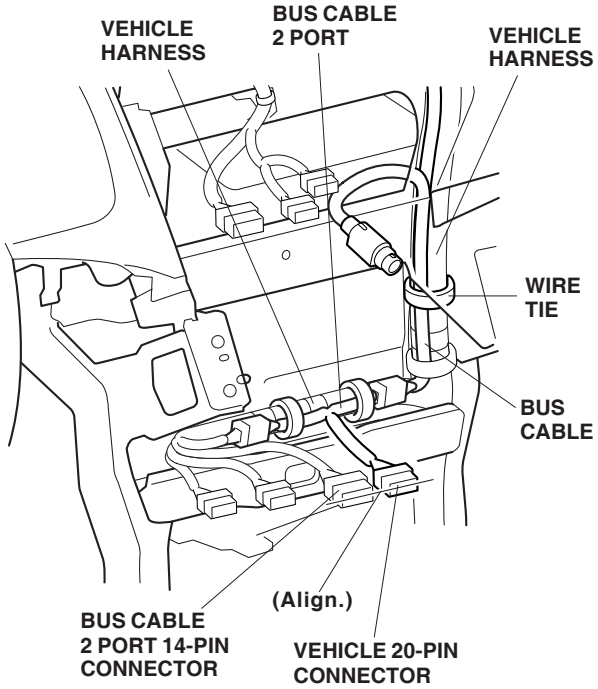

23. Secure the bus cable to the vehicle harness with a wire tie.

24. Using a felt-tip pen, mark the Music Link harness as shown.

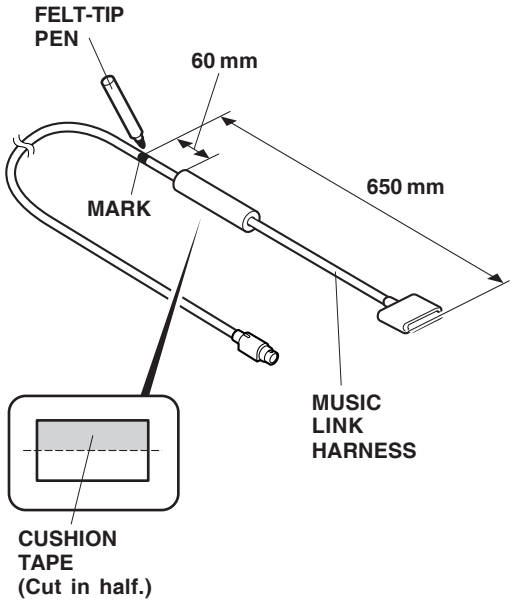

25. Cut one cushion tape in half, and wrap one half of the cushion tape to the Music Link harness as shown.

26. To prevent damage, wrap electrical tape around the drill bit at a point about 30 mm away from the tip. While wearing eye protection, drill a 20 mm hole through the marked location. Remove all burrs from the drilled hole.

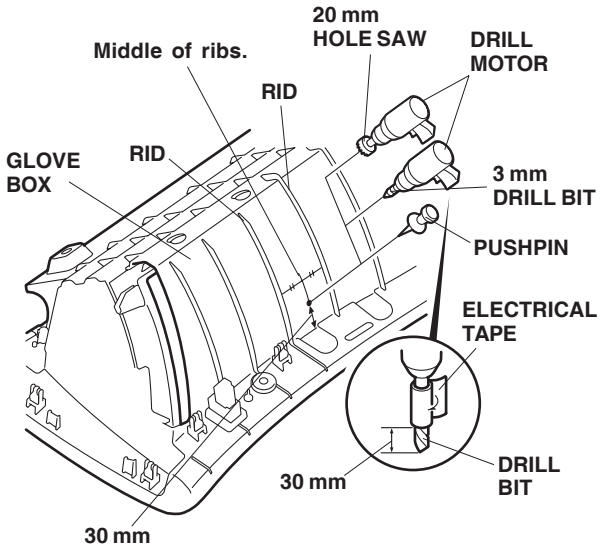

BII 31184-31893 (0602)

© 2006 American Honda Motor Co., Inc. - All Rights Reserved.

27. Route the Music Link harness DIN connector into the 20 mm hole in the direction shown.

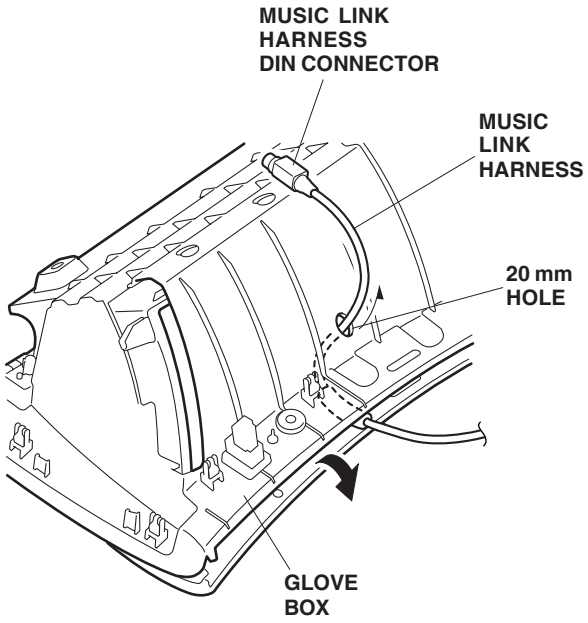

28. Cut the grommet as shown. Attach the grommet to the Music Link harness, and seat the grommet into the 20 mm hole.

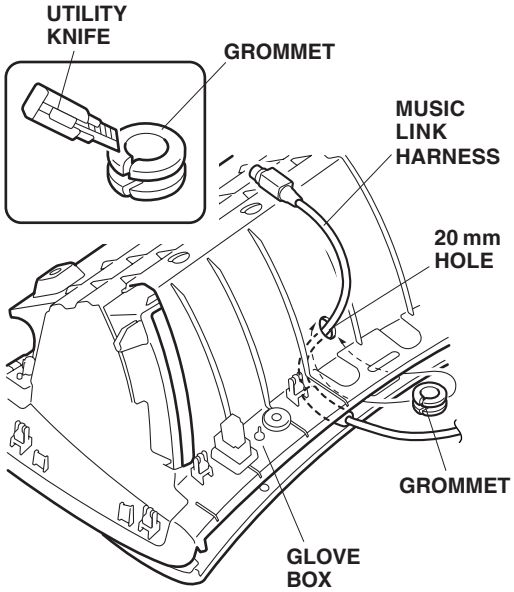

29. Insert the Music Link adapter unit into the unit cushion.

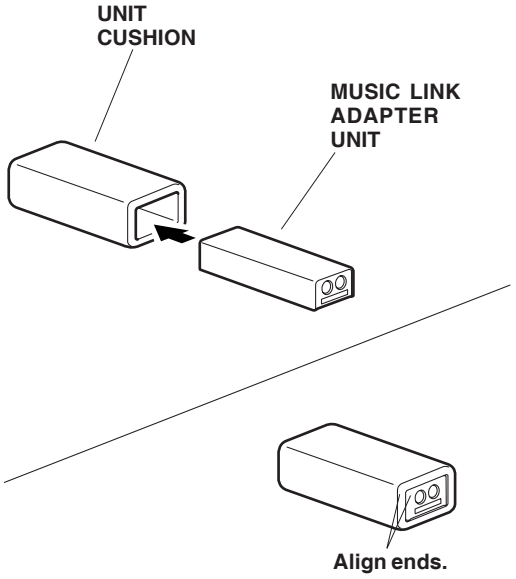

30. Route the Music Link harness through the upper panel opening to the center panel opening, and connect the Music Link harness DIN connector (WHITE) to the Music Link adapter assembly. Note the location of the connector and the terminals.

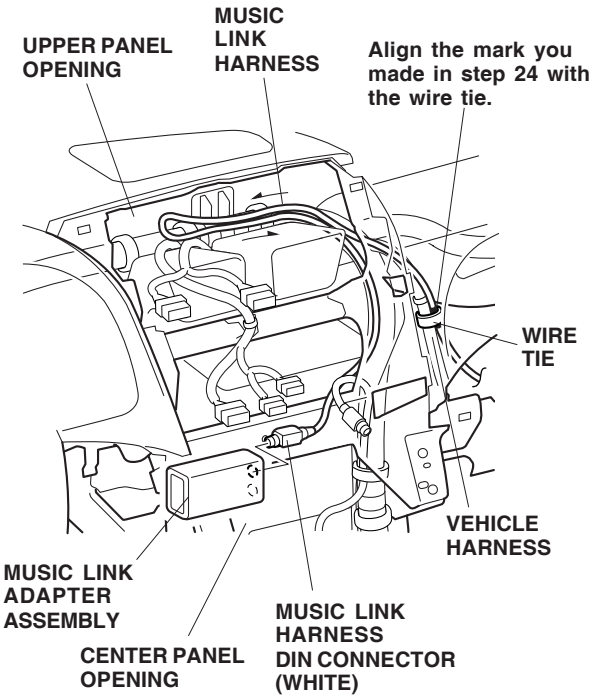
UPPER PANEL OPENING
MUSIC LINK HARNESS
Align the mark you made in step 24 with the wire tie.
WIRE TIE
VEHICLE HARNESS
MUSIC LINK ADAPTER ASSEMBLY
CENTER PANEL OPENING
MUSIC LINK HARNESS DIN CONNECTOR (WHITE)

© 2006 American Honda Motor Co., Inc. - All Rights Reserved.

31. Secure the Music Link harness to the vehicle harness with a wire tie beside the vehicle clip. (Align the mark you made in step 24 with the wire tie as shown).

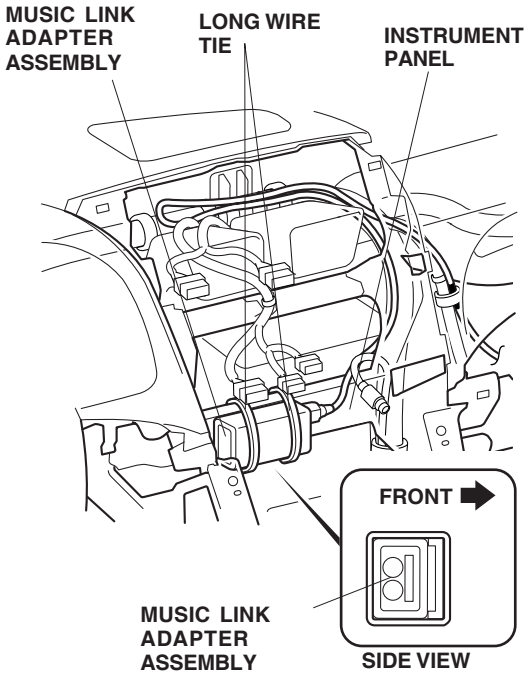

32. As illustrated, secure the Music Link adapter unit onto the instrument panel with two long wire ties.

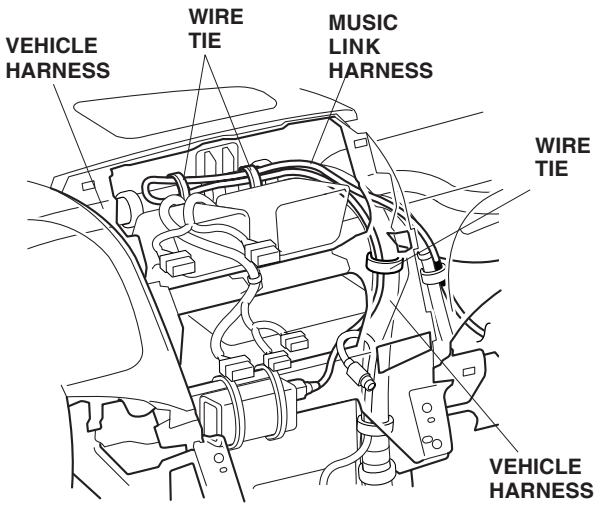

33. Temporarily secure the Music Link harness to the vehicle harness with three wire ties.

34. Route the bus cable along the Music Link harness, and connect the bus cable DIN connector (Black) to the Music Link adapter assembly. Note the location of the connector and the terminals.

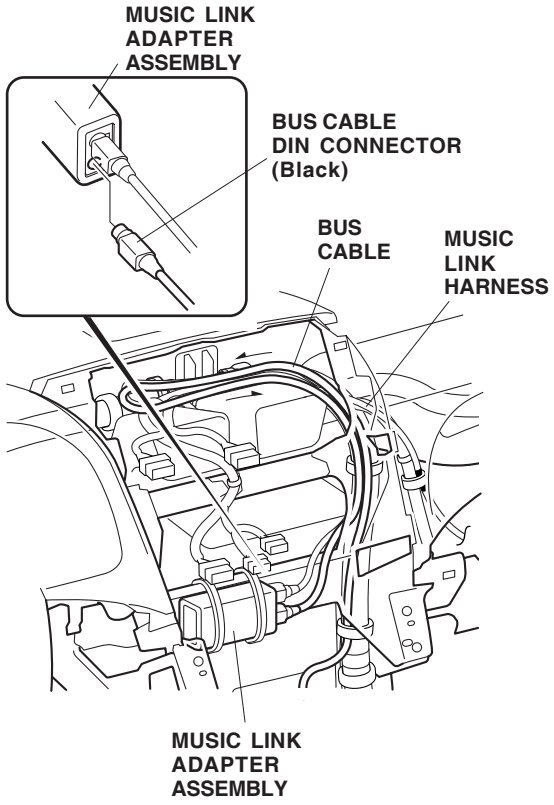

35. Secure the bus cable to the vehicle harness with the three wire ties temporarily secured in step 33.

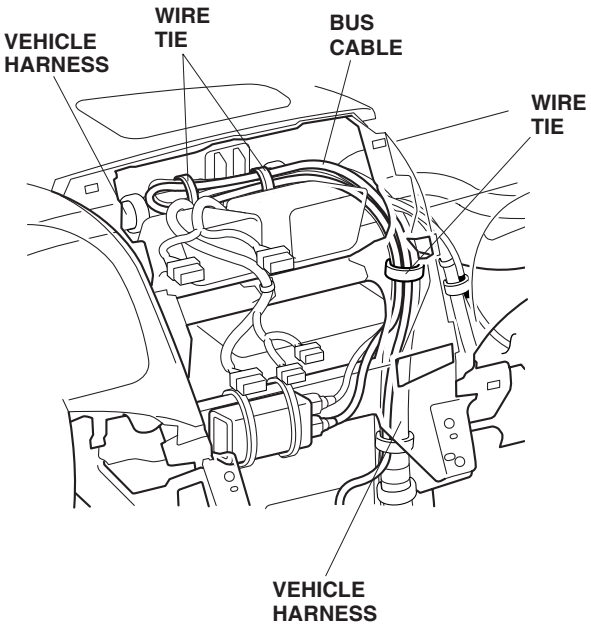

BII 31184-31893 (0602)
© 2006 American Honda Motor Co., Inc. - All Rights Reserved.

36. Reinstall the glove box.

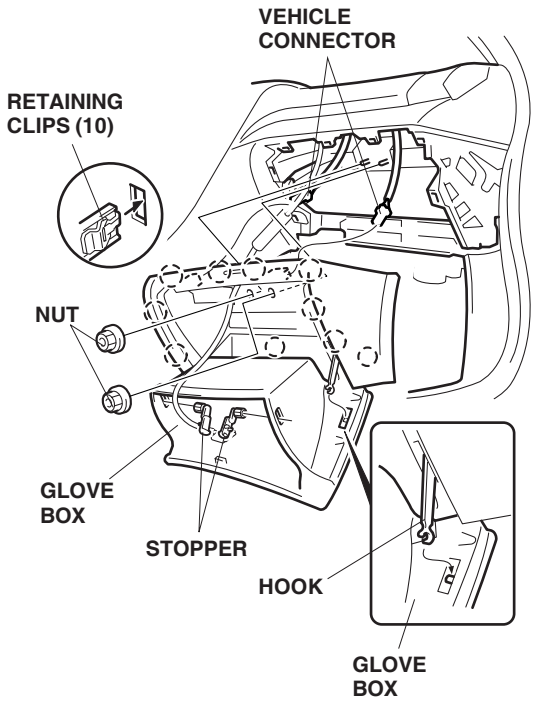

37. Connect the vehicle connectors and bus cable 14-pin connector (or bus cable 2 port 14-pin connector) to the center panel, and reinstall the audio unit.

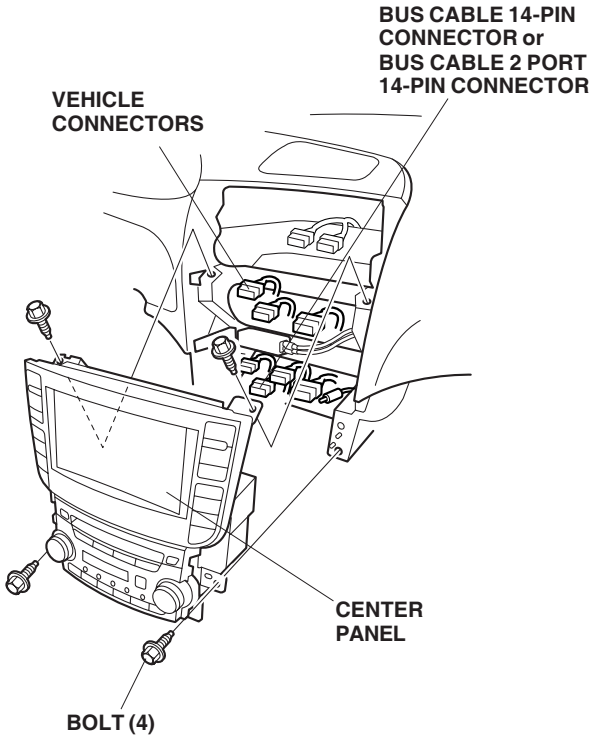

38. Check that all wire harnesses are routed properly and all connectors are plugged in.
39. Reconnect the negative cable to the battery.
40. Enter the customer's radio anti-theft code, and reset the radio station presets, the clock.
41. Reinstall all removed parts.
42. Turn the power of the audio unit ON. Check that "No Disc" is shown on the display while in the CD changer mode (the Music Link should be recognized as CD changer 4).

NOTE: Whenever the battery is disconnected, the driver's AUTO function is disable.

43. Start the engine. Push down on the driver's window switch until the window is fully open.
44. Pull up on the driver's window switch fully to close the window completely, then hold the switch for 2 seconds or more.
45. Test the window AUTO function.

NOTE: Please refer to the Music Link Quick Reference guide for more information.

© 2006 American Honda Motor Co., Inc. - All Rights Reserved.